




Motorola V60c Logic Board Replacement

Written By: Ryan Kuroiwa

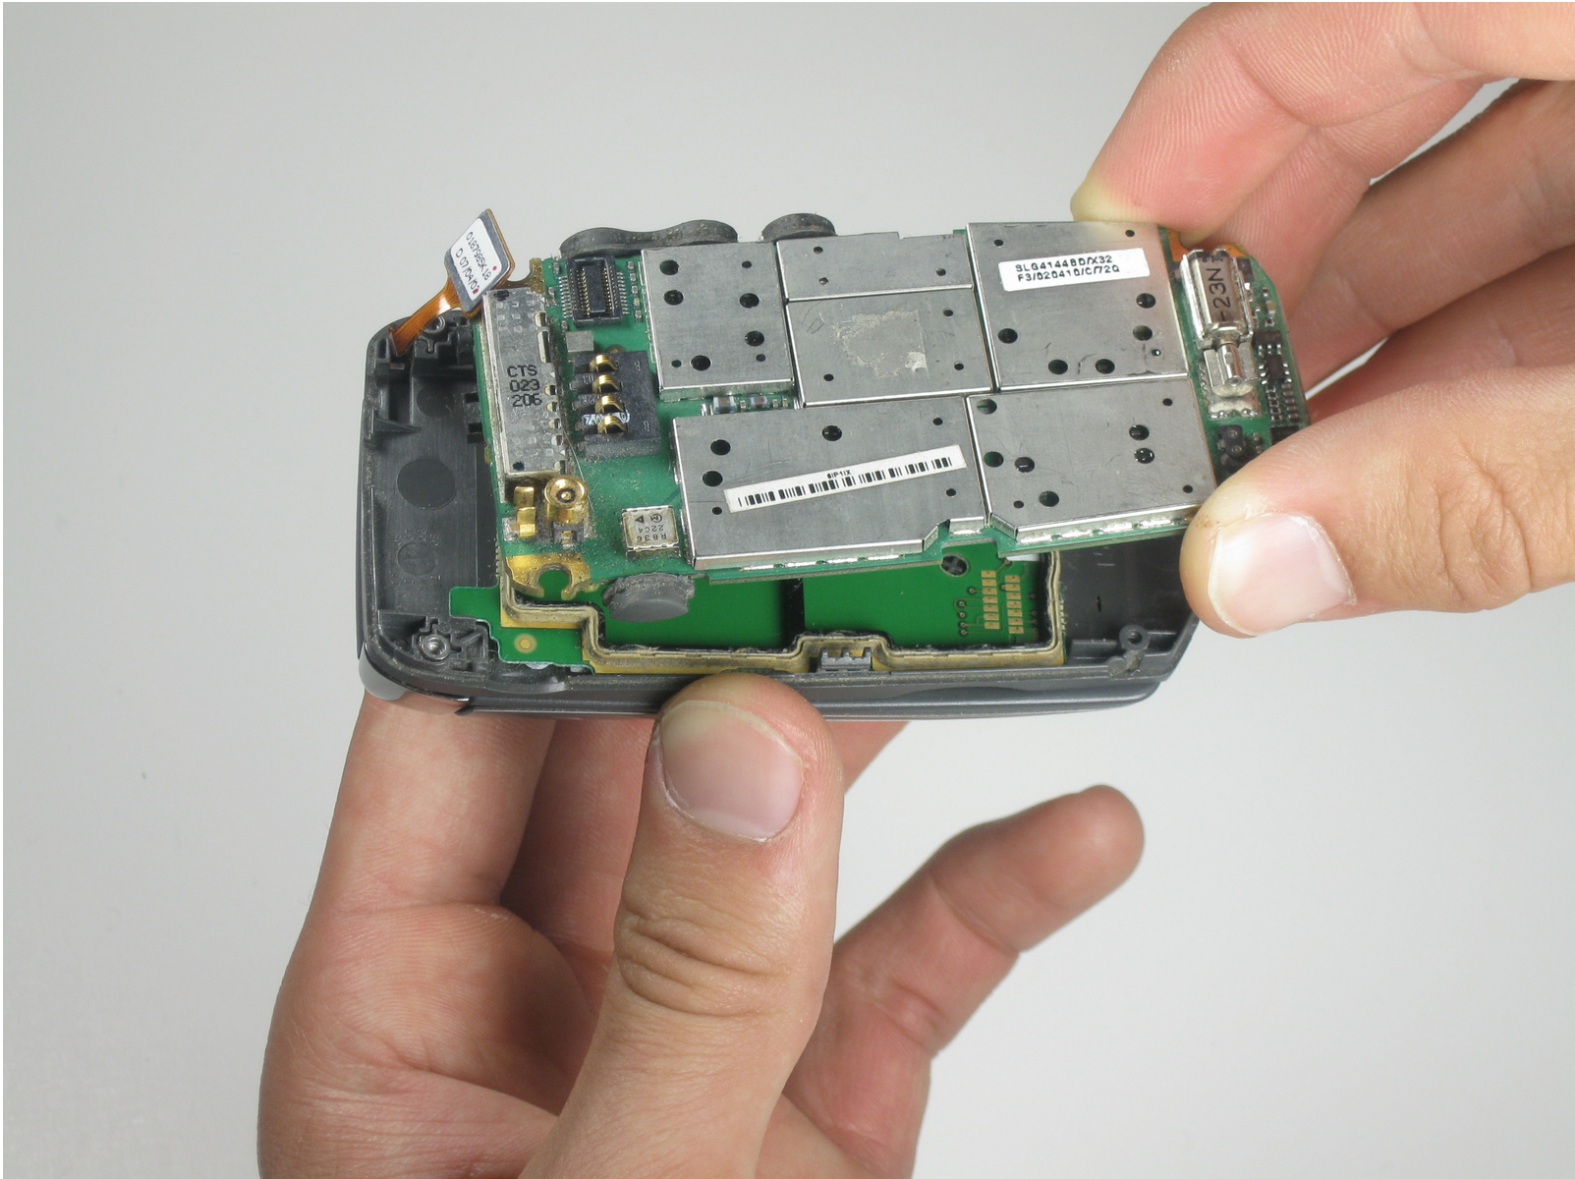

INTRODUCTION

How to replace the logic board.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)



PARTS:

- [Motorola V60c Logic Board](#) (1)
-

Step 1 — Battery



- Depress the silver button.
- Pull from top of phone to lift the cover.

Step 2



- Hold battery from both sides at the bottom.
- Push upwards and gently lift to remove.

Step 3 — Logic Board



- Remove 4 screws from corners using T-6 screwdriver.
- ⓘ NOTE: Bottom two screws are gold.
- NOTE: Make sure screws return to correct place when reassembling.

Step 4



- Use a plastic opening tool to pry up back cover from the two side clips.



ⓘ NOTE: sticker might be attached to rest of phone.

Step 5



- Remove the back cover.

Step 6

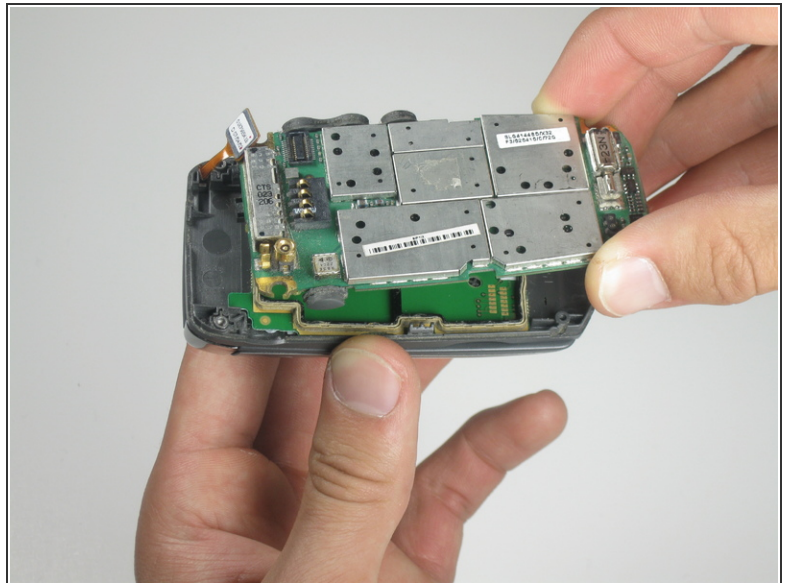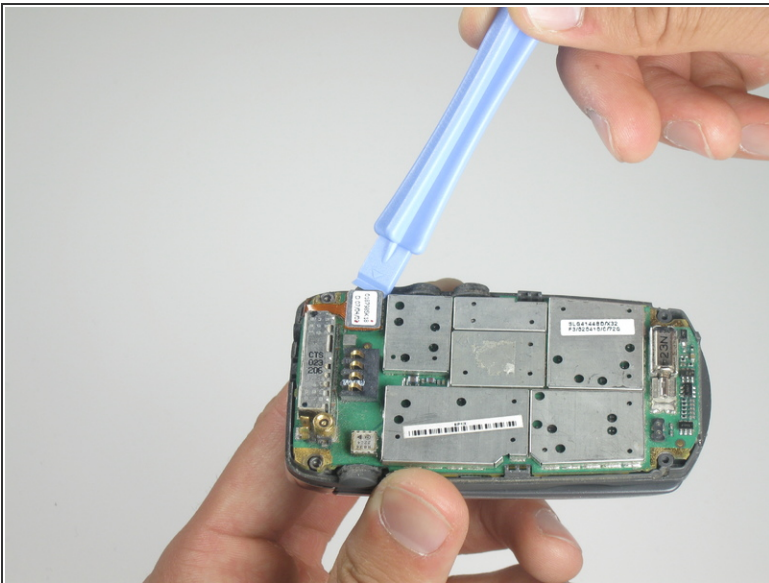

- Use a plastic opening tool to gently remove the orange ribbon cable.
- Lift up the main logic board to remove.

To reassemble your device, follow these instructions in reverse order.

